





Use protective caps to cover the top sockets of columns to keep out dust and debris.

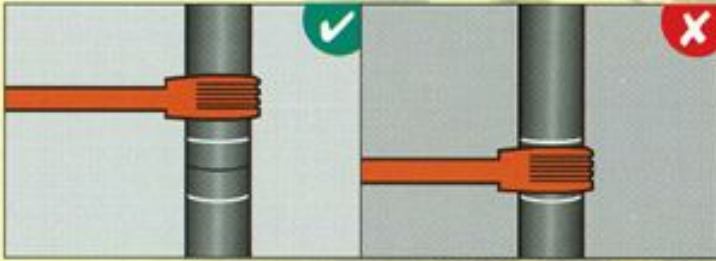

Avoid clamping electrodes at either end (note painted white lines) and clamp above or below the joint (not at the joint) to avoid cave-in or crushing of electrode.

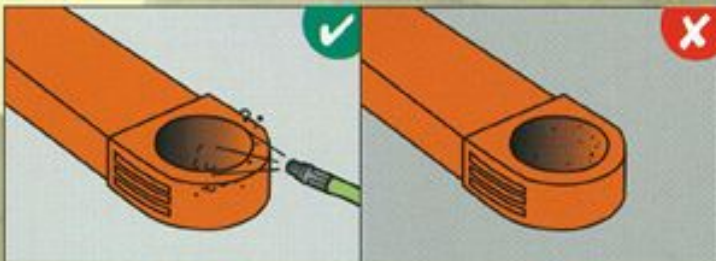

Periodically clean contact surface of electrode holder with compressed air to maintain good electrical contact.

